

correct



incorrect!



Adjusting the straps



ATTENTION: Always protect free end of the stran with the loon



IDENTITY CARD

МО	DEL AND	TYPE OF E	QUIF	PMENT							
			R	REF. NUMBER							
SERIAL NUMBER							DATE OF MANUF.				
USE	r name										
							DATE OF PUTTING INTO OPERATION				
DATE OF PURCHASE											
		PERI	ODI	C EXAMI	1A NOITAN	VD R	EPAIR HISTORY				
	DATE	EN TRY PERIOD	SON FOR DICEXAMINATION REPAIR		DERECTS SERVISCA ANDOTHERSEVERA		B III D O U T	NAMEANDS SONATURE OFCOMPETENTPERSON		PERODIC EXAMINATION NEXTO DEDATE	
1											
2											
3											
4				•					•		

Louis Reyners BV, Symon Spiersweg 13A,1506 RZ, Zaandam, The Netherlands ,Tel: +31 (0)756504750, fax +31 (0)756504760, www.lr.nl



Position during work


correct

correct

incorrect !

Instruction Manual **READ CAREFULLY BEFORE USE** THE EQUIPMENT



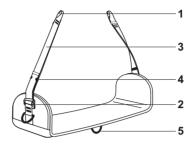

Elements of the seat board

- (1) Attachment points.
- Adjusting buckle.
- (3) Suspension straps,
- (4) Loop.
- (5) Tool's loop
- the seat board shall only be used by a person trained and competent in its safe use.
- the seat board must be used in conjunction with full body harness and fall arrest equipment.
- the seat board is not personal protective equipment and must be never use alone.
- it is forbidden to make any alterations or additions to the seat board without the manufacturer's prior written consent.
- any repair shall only be carried out by device manufacturer or his certified representative.
- before use ensure about the compatibility of items of equipment assembled into a fall arrest system. Periodically check connecting and adjusting of the equipment components to avoid accidental loosening or disconnecting of the components.
- it is forbidden to use combinations of items of equipment in which the safe function of any one item is affected by or interferes with the
- before each use of the seat boardit is obligatory to carry out a pre-use check of the equipment, to ensure that it is in a serviceable condition and operates correctly before it is used
- during pre-use check it is necessary to inspect all elements of the equipment in respect of any damages, excessive wear, corrosion, abrasion, cutting or incorrect acting.
- after every12 months of utilization, the seat board must be withdrawn from use to carry out periodical detailed inspection. The periodic inspection must be carried out by
 - a competent person for periodic inspection. The periodic inspection can be carried out also by the manufacturer or his authorized
- In case of some types of the complex equipment e.g. some types of retractable fall arresters the annual inspection can be carried out only by the manufacturer or his authorized representative.
- regular periodic inspections are the essential for equipment maintenance and the safety of the users which depends upon the continued efficiency and durability of the equipment.
- during periodic inspection it is necessary to check the legibility of the equipment marking.
- it is essential for the safety of the user that if the product is re-sold outside the original country of destination the reseller shall provide instructions for use, for maintenance, for periodic examination and for repair in language of the country in which the product is to be used.
- the sear board must be withdrawn from use immediately when any doubt arise about its condition for safe use and not used again until confirmed in writing by equipment manufacturer or his representative after carried out the detailed inspection.
- the device must be withdrawn from use immediately and destroyed when it have been used to arrest a fall.
- a full body harness is the only acceptable body holding device that can be used in a fall arrest system.
- the anchor device or anchor point for the fall arrest system should always be positioned, and the work carried out in such a way, as to minimise both the potential for falls and potential fall distance. The anchor device/point should be placed above the position of the user . The shape and construction of the anchor device/point shall not allowed to self-acting disconnection of the equipment. Minimal static strength of the anchor device/point is 10 kN. It is recommended to use certified and marked structural anchor point complied with EN795.
- it is obligatory to verify the free space required beneath the user at the workplace before each occasion of use the fall arrest system, so that, in the case of a fall, there will be no collision with the ground or other obstacle in the fall path. The required value of the free space should be taken from instruction manual of used equipment.
- the seat board must be transported in the package (e.g.: bag made of moisture-proof textile or foil bag or cases made of steel or plastic) to protect it against damage or moisture.
- the seat board can be cleaned and desinfected without causing adverse effect on the materials in the manufacture of the equipment. For textile products use mild detergents for delicate fabrics, wash by hand or in a machine and rinse in water. Plastic parts can be cleaned only with water. When the equipment becomes wet, either from being in use or when due cleaning, it shall be allowed to dry naturally, and shall be kept away from direct heat
- the device should be stored loosely packed, in a well-ventilated place, protected from direct light, ultraviolet degradation, damp environment, sharp edges, extreme temperatures and corrosive or aggressive substances.


ADMISSIBLE TIME OF USE

The seat board can be used for 5 years. After this period the devicemust be withdrawn from use to carry out manufacturer's detailed

The manufacturer's inspection can be carried out by:

- manufacturer
- or person recommended by manufacturer
- or company recommended by manufacturer


During this inspection will be established admissible time of use the seat board till next manufacturer's inspection.

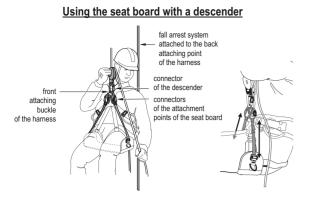

correct



 incorrect!



Adjusting the straps



ATTENTION: Always protect free end of the strap with the loop





IDENTITY CARD

MODEL AND TYPE OF EQUIPMENT											
	ref. Number										
SERI	SERIAL NUMBER						DATE OF MAN	IUF.			
USE	r name										
							DATE OF PUTTING INTO OPERATION				
DAT	DATE OF PURCHASE										
PERIODIC EXAMINATION AND REPAIR HISTORY											
	DATE	EN TRY PERIOD	SON FOR DIC EXAMINATION BEEN IS		DEFE CTS N REFA IS C A RE AND O THEREEVELANT		I E E D O U T	NAMEAND SIGNATURE OFCOMPLIENTERSON		PERIODIC EXAMINATION NEXTOUEDATE	
1											
2											
3											
4											

Louis Reyners BV, Symon Spiersweg 13A,1506 RZ, Zaandam, The Netherlands ,Tel: +31 (0)756504750, fax +31 (0)756504760, www.lr.nl



Position during work


correct

correct

incorrect !

Instruction Manual READ CAREFULLY BEFORE USE THE EQUIPMENT



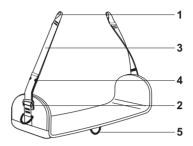

Elements of the seat board

- (1) Attachment points.
- Adjusting buckle.
- (3) Suspension straps,
- (4) Loop.
- (5) Tool's loop
- the seat board shall only be used by a person trained and competent in its safe use.
- the seat board must be used in conjunction with full body harness and fall arrest equipment.
- the seat board is not personal protective equipment and must be never use alone.
- it is forbidden to make any alterations or additions to the seat board without the manufacturer's prior written consent.
- any repair shall only be carried out by device manufacturer or his certified representative.
- before use ensure about the compatibility of items of equipment assembled into a fall arrest system. Periodically check connecting and adjusting of the equipment components to avoid accidental loosening or disconnecting of the components.
- it is forbidden to use combinations of items of equipment in which the safe function of any one item is affected by or interferes with the
- before each use of the seat boardit is obligatory to carry out a pre-use check of the equipment, to ensure that it is in a serviceable condition and operates correctly before it is used
- during pre-use check it is necessary to inspect all elements of the equipment in respect of any damages, excessive wear, corrosion, abrasion, cutting or incorrect acting.
- after every12 months of utilization, the seat board must be withdrawn from use to carry out periodical detailed inspection. The periodic inspection must be carried out by
- a competent person for periodic inspection. The periodic inspection can be carried out also by the manufacturer or his authorized
- In case of some types of the complex equipment e.g. some types of retractable fall arresters the annual inspection can be carried out only by the manufacturer or his authorized representative.
- regular periodic inspections are the essential for equipment maintenance and the safety of the users which depends upon the continued efficiency and durability of the equipment.
- during periodic inspection it is necessary to check the legibility of the equipment marking.
- it is essential for the safety of the user that if the product is re-sold outside the original country of destination the reseller shall provide instructions for use, for maintenance, for periodic examination and for repair in language of the country in which the product is to be used.
- the sear board must be withdrawn from use immediately when any doubt arise about its condition for safe use and not used again until confirmed in writing by equipment manufacturer or his representative after carried out the detailed inspection.
- the device must be withdrawn from use immediately and destroyed when it have been used to arrest a fall.
- a full body harness is the only acceptable body holding device that can be used in a fall arrest system.
- the anchor device or anchor point for the fall arrest system should always be positioned, and the work carried out in such a way, as to minimise both the potential for falls and potential fall distance. The anchor device/point should be placed above the position of the user . The shape and construction of the anchor device/point shall not allowed to self-acting disconnection of the equipment. Minimal static strength of the anchor device/point is 10 kN. It is recommended to use certified and marked structural anchor point complied with EN795.
- it is obligatory to verify the free space required beneath the user at the workplace before each occasion of use the fall arrest system, so that, in the case of a fall, there will be no collision with the ground or other obstacle in the fall path. The required value of the free space should be taken from instruction manual of used equipment.
- the seat board must be transported in the package (e.g.: bag made of moisture-proof textile or foil bag or cases made of steel or plastic) to protect it against damage or moisture.
- the seat board can be cleaned and desinfected without causing adverse effect on the materials in the manufacture of the equipment. For textile products use mild detergents for delicate fabrics, wash by hand or in a machine and rinse in water. Plastic parts can be cleaned only with water. When the equipment becomes wet, either from being in use or when due cleaning, it shall be allowed to dry naturally, and shall be kept away from direct heat
- the device should be stored loosely packed, in a well-ventilated place, protected from direct light, ultraviolet degradation, damp environment, sharp edges, extreme temperatures and corrosive or aggressive substances.

ADMISSIBLE TIME OF USE

The seat board can be used for 5 years. After this period the devicemust be withdrawn from use to carry out manufacturer's detailed

The manufacturer's inspection can be carried out by:

- manufacturer
- or person recommended by manufacturer
- or company recommended by manufacturer

During this inspection will be established admissible time of use the seat board till next manufacturer's inspection.